
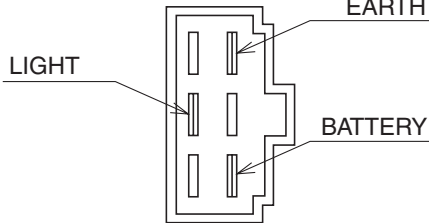 

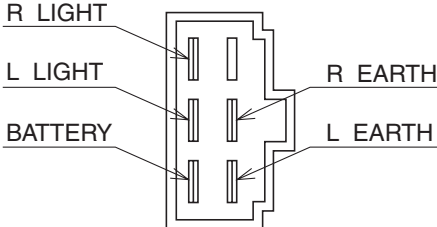 

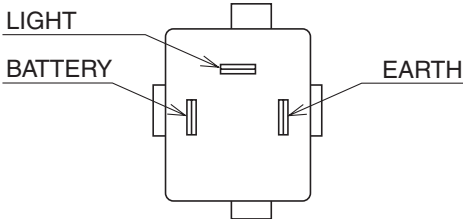 

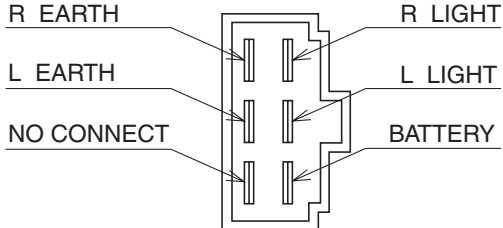 

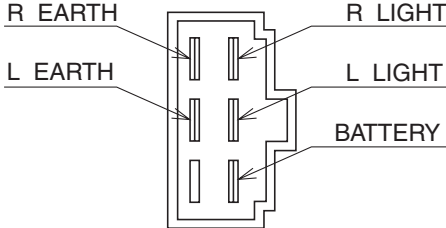 

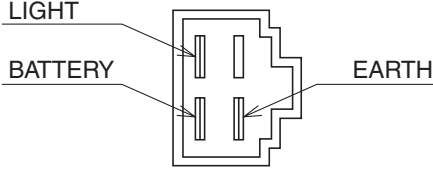 

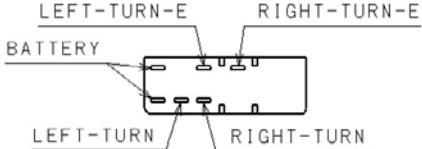 

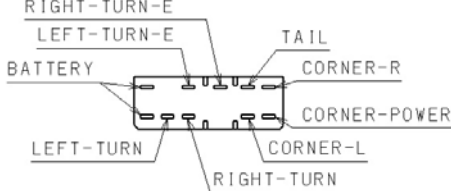 

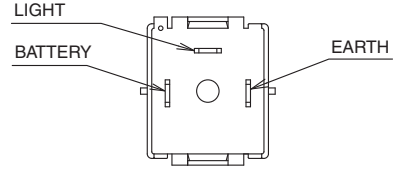 



FLASHER RELAYS

New-Era No.	Ref.No.	Application
FLS-101  AC24V	8-97360084-1 (066500-5651)	INDICATOR RELAY (FLASHER RELAY) ISUZU ELF NKR,NPR 
FLS-102  AC24V	MC848790 (066500-2081) MC849878 (066500-2080) (066500-2510) (066500-3040) (066500-3570) 819801650	mitsubishi FUSO HINO 
FLS-103  AC24V	MB302374 (066500-1800)	mitsubishi CANTER 
FLS-104  AC24V	1-83470062-0 1-82550299-0 (066500-3860) (068300-0460)	ISUZU FORWARD EB03 
FLS-105  AC24V	1-83470052-0 (066500-3251)	ISUZU ELF NKR,NKS,NPR,NPS 

FLASHER RELAYS

New-Era No.	Ref.No.	Application
FLS-106 AC24V 	1-83470035-0 (066500-0682)	INDICATOR RELAY (FLASHER RELAY) ISUZU ELF NKR,NKS,NPR,NPS 
FLS-107 AC12V 	MC867672 (066500-3301)	MITSUBISHI CANTER FE 93~ 
FLS-108 AC12V 	MC857354 MC857345 MK327447 (066500-3132) (066500-3133) (066500-4540)	MITSUBISHI CANTER FE 96~  <p>※12TERMINAL 10PIN</p>
FLS-109 24V 	066500-1511 066500-1512 8-94143430-0 8-19803701-1	ISUZU ELF NKR NPR TOYOTA DYNA BU MEGA CRUISER BXD20 TOYOACE BU 
FLS-151 AC24V 	VF324K (NILES)	UNIVERSAL TYPE [TERMINAL] X : POWER(24V) P : INDICATOR L : LAMP