
Parallel Mechanical Gripper HP10_{Series}

Air Piping Not Required

(Normally Open Type and Close Type)

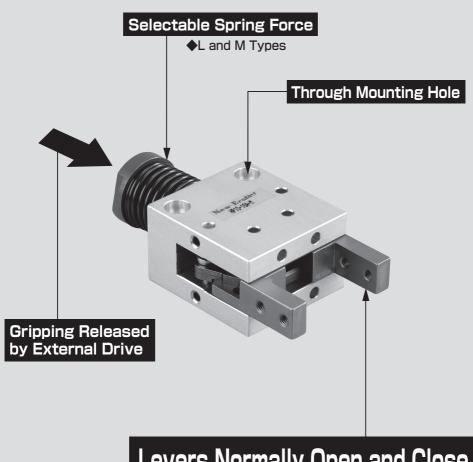

Levers Normally Open and Close

Model Code No.



Series Name

Nominal diameter

10
16

20


Gripping Force

L: Low M: Medium **Please feel free to consult us about the grip forces (spring forces) other than the ones specified on the left.

Action Type

A : Single Acting Normally Open B : Single Acting Normally Close

■ Internal Structure Diagram

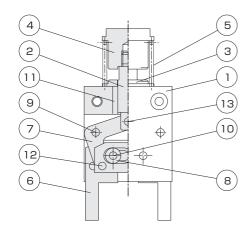

Parts List

NO	Name	Material			
1	Main Body	Aluminum Alloy			
2	Piston Rod	Stainless Steel			
3	Pressure Cover	Aluminum Alloy			
4	Pressure Cover	Carbon Tool Steel			
5	Spring	Spring Steel			
6	Lever	Carbon Tool Steel			
7	Action Lever	Carbon Tool Steel			
8	Ring	Carbon Tool Steel			
9	Fulcrum Pin	Carbon Tool Steel			
10	Fulcrum Pin	Carbon Tool Steel			
11	Metal	Oil-impregnated Sintered Bearing			
12	Press Fit Pin	Carbon Tool Steel			
13	Press Fit Pin	Carbon Steel			

■ Specifications

Elastic Body to be Used		Compression spring				
Operating Temperature [°C]		0~120				
Lubrication		Required (Sliding parts of the machine)				
Maximum Operating Cycle [Cycle/min]		120				
Repeat Accuracy [mm]		±0.01				
Applicable Switch		Not mountable				

Action Type	Model	Nominal diameter [mm]	Opening/ Closing Stroke [mm] Note)3	[1	g Force N]	Note) 1 Extrusion Force	Allowable Extrusion Force	Mass	Outside Dimensions (T x W x L)	Note)2 Lever Ratio
				Open	Close	[N]	[N]	[g]	(mm) _/	naliu
Single Acting Normally Open	HP10-10A-L	- 10	4 (4~5.7)	3.4	_	23.5	- 50	60	16×23×51.3	1:2
	HP10-10A-M			4.5	_	32.3				
Single Acting Normally Close	HP10-10B-L			_	3.4	23.5				
	HP10-10B-M			_	4.5	32.3				
Single Acting Normally Open	HP10-16A-L	16	8 (8~9.7)	4.4	_	32.3	- 130	135	22×34×59.1	1:2.2
	HP10-16A-M			6.4	_	47				
Single Acting Normally Close	HP10-16B-L			_	4.4	32.3				
	HP10-16B-M			_	6.4	47				
Single Acting Normally Open	HP10-20A-L	20	12 (12~13.9)	6.5	_	47	210	245	26×45×75.8	1:2.2
	HP10-20A-M			8.3	_	58.8				
Single Acting Normally Close	HP10-20B-L			_	6.5	47				
	HP10-20B-M	1		_	8.3	58.8				

Note 1): Extrusion force is an external force required to open the levers completely by overwhelming the spring force in the closing direction.

Note 2): The lever ratio is the "Extruded Distance (how much the rear rad is extruded) and the "Lever Opening Distance (Lever Opening Distance)."

Note 2): The lever ratio is the "Extruded Distance (how much the rear rod is extruded) and the "Lever Opening Distance (Lever Opening Distance at that time) (both sides) expressed in "Extruded Distance: Lever Opening Distance".


Note 3): The opening/closing stroke is a reference value. Values in the parentheses are measured values.


■ Main Body Mounting Example

When the through-hole of the main body is used

2 When the mounting screw on the back side of the through-hole is used


(For ϕ 16 and ϕ 20, the bolt head does not protrude from the main body.)

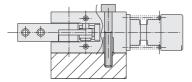


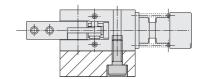



■Effective Gripping Force


When the levers are full open
--- When the levers are full closed

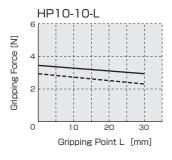


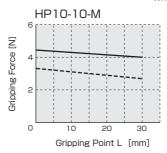

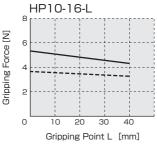

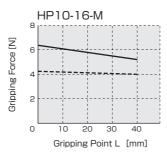


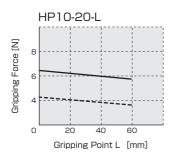

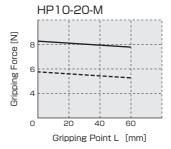


■ Gripping Point Limit Range

HP10-10···30mm or less HP10-16···40mm or less HP10-20···60mm or less

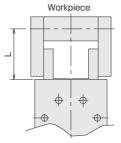

CAD data provided


■ Dimensions HP10-10A-□

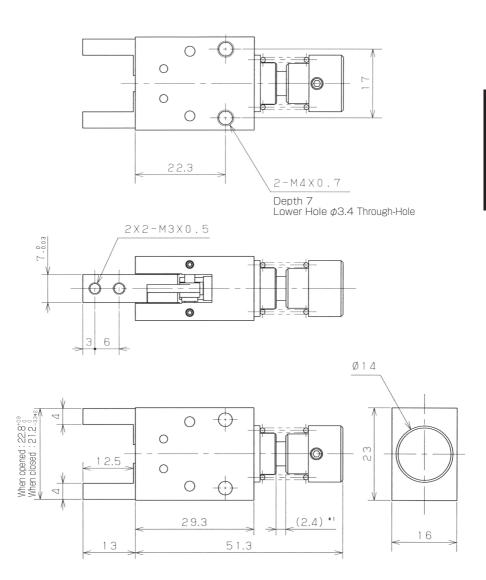

- \cdot Do not hit the cam and the dog against the pressure cover in use.
- * 1) This dimension allows extrusion. See "Lever Ratio" for the lever opening distance for the extrusion distance.
- * 2) This is a dimension at the maximum extrusion.

Series


■ Dimensions HP10-10B-

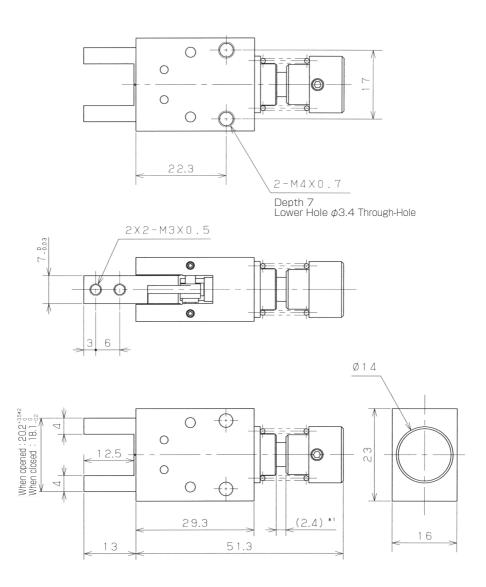

- \cdot Do not hit the cam and the dog against the pressure cover in use.
- * 1) This dimension allows extrusion. See "Lever Ratio" for the lever opening distance for the extrusion distance.
- * 2) This is a dimension at the maximum extrusion.

CAD data provided

■ Dimensions HP10-16A-□

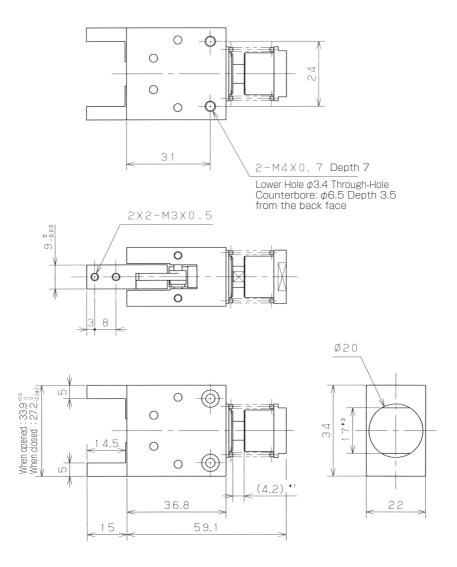


- Do not hit the cam and the dog against the pressure cover in use.
- * 1) This dimension allows extrusion. See "Lever Ratio" for the lever opening distance for the extrusion distance.
- * 2) This is a dimension at the maximum extrusion.
- * 3) This is used for rod tightening, so it is different from the actual position.

HP10 Series


CAD data provided

■ Dimensions HP10-16B-□

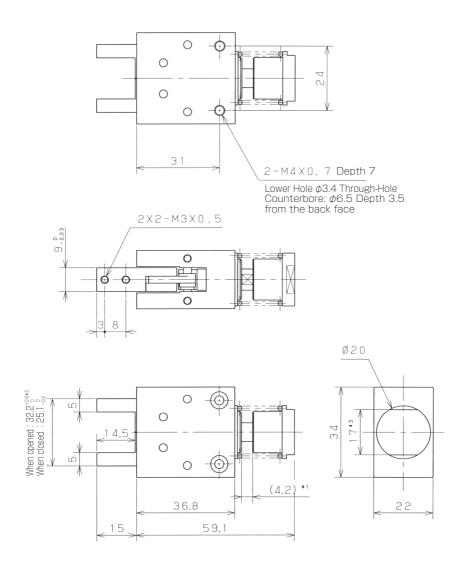

- · Do not hit the cam and the dog against the pressure cover in use.
- * 1) This dimension allows extrusion. See "Lever Ratio" for the lever opening distance for the extrusion distance.
- * 2) This is a dimension at the maximum extrusion.
- * 3) This is used for rod tightening, so it is different from the actual position.

■ Dimensions HP10-20A-□

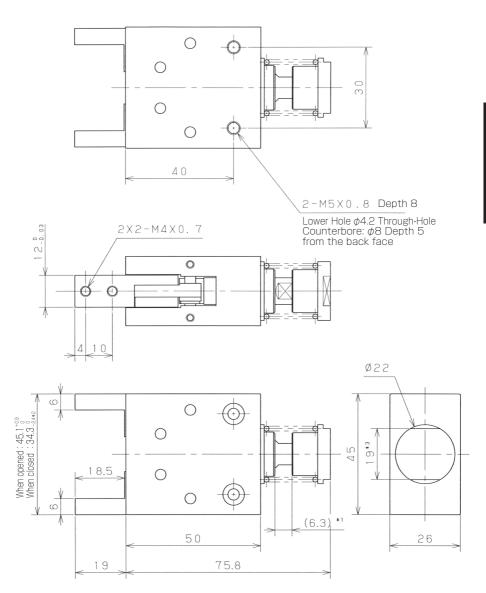


Note) • The allowable extrusion force shall be within the specified range in use.
• Do not hit the cam and the dog against the pressure cover in use.

- * 1) This dimension allows extrusion. See "Lever Ratio" for the lever opening distance for the extrusion distance.
- * 2) This is a dimension at the maximum extrusion.
- * 3) This is used for rod tightening, so it is different from the actual position.

HP10 Series

CAD data provided

■ Dimensions HP10-20B-□

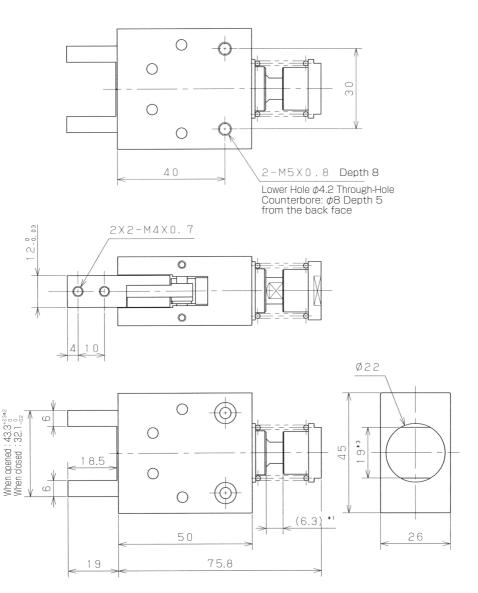

- $\boldsymbol{\cdot}$ Do not hit the cam and the dog against the pressure cover in use.
- * 1) This dimension allows extrusion. See "Lever Ratio" for the lever opening distance for the extrusion distance.
- * 2) This is a dimension at the maximum extrusion.
- * 3) This is used for rod tightening, so it is different from the actual position.